

## Instructions for Use: LOCATOR CORE TOOL



NOTE: If you have the new LOCATOR Core Tool complete, (Preat order number 8393) start with Step 2. If you have purchased the newly redesigned Male Removal Tool (Preat order number 8397) portion separately, start with Step 1.



1. Replace the previous curved Male Removal Tool portion of the LOCATOR Core Tool with the new tip (8397), adding it to the Core Tool's existing middle (Male Seating Tool) and end (Abutment Driver) sections. Tighten all 3 pieces together.



2. Loosen the new (8397) Male Removal Tool a full 3 turns counter clockwise (you will see a visible gap).

3. To remove, simply insert the new tip into the cap/male assembly and push straight in to the bottom of the nylon male. Then tilt the tool so that the sharp edge of the tip will grab hold of the male and pull it out of the cap.

4. To disengage the tool, tilt the tool down and away from you and tighten the new Male Removal Tool clockwise back onto the Core Tool. This will activate the removal pin and dislodge the nylon male from the tip end of the Male Removal Tool.



5. Separate the Male Removal Tool section from the LOCATOR Core Tool and use the Male Seating Tool end of the remaining two sections to place a new nylon male into the empty titanium metal housing.

**Preat Corporation 1-800-232-7732**  
[www.preat.com](http://www.preat.com)



T-0112 Rev.00

## Instructions for Use: LOCATOR CORE TOOL



NOTE: If you have the new LOCATOR Core Tool complete, (Preat order number 8393) start with Step 2. If you have purchased the newly redesigned Male Removal Tool (Preat order number 8397) portion separately, start with Step 1.



1. Replace the previous curved Male Removal Tool portion of the LOCATOR Core Tool with the new tip (8397), adding it to the Core Tool's existing middle (Male Seating Tool) and end (Abutment Driver) sections. Tighten all 3 pieces together.



2. Loosen the new (8397) Male Removal Tool a full 3 turns counter clockwise (you will see a visible gap).

3. To remove, simply insert the new tip into the cap/male assembly and push straight in to the bottom of the nylon male. Then tilt the tool so that the sharp edge of the tip will grab hold of the male and pull it out of the cap.

4. To disengage the tool, tilt the tool down and away from you and tighten the new Male Removal Tool clockwise back onto the Core Tool. This will activate the removal pin and dislodge the nylon male from the tip end of the Male Removal Tool.



5. Separate the Male Removal Tool section from the LOCATOR Core Tool and use the Male Seating Tool end of the remaining two sections to place a new nylon male into the empty titanium metal housing.

**Preat Corporation 1-800-232-7732**  
[www.preat.com](http://www.preat.com)



T-0112 Rev.00

## Instructions for Use: LOCATOR CORE TOOL



NOTE: If you have the new LOCATOR Core Tool complete, (Preat order number 8393) start with Step 2. If you have purchased the newly redesigned Male Removal Tool (Preat order number 8397) portion separately, start with Step 1.



1. Replace the previous curved Male Removal Tool portion of the LOCATOR Core Tool with the new tip (8397), adding it to the Core Tool's existing middle (Male Seating Tool) and end (Abutment Driver) sections. Tighten all 3 pieces together.



2. Loosen the new (8397) Male Removal Tool a full 3 turns counter clockwise (you will see a visible gap).

3. To remove, simply insert the new tip into the cap/male assembly and push straight in to the bottom of the nylon male. Then tilt the tool so that the sharp edge of the tip will grab hold of the male and pull it out of the cap.

4. To disengage the tool, tilt the tool down and away from you and tighten the new Male Removal Tool clockwise back onto the Core Tool. This will activate the removal pin and dislodge the nylon male from the tip end of the Male Removal Tool.



5. Separate the Male Removal Tool section from the LOCATOR Core Tool and use the Male Seating Tool end of the remaining two sections to place a new nylon male into the empty titanium metal housing.

**Preat Corporation 1-800-232-7732**  
[www.preat.com](http://www.preat.com)



T-0112 Rev.00

## Instructions for Use: LOCATOR CORE TOOL



NOTE: If you have the new LOCATOR Core Tool complete, (Preat order number 8393) start with Step 2. If you have purchased the newly redesigned Male Removal Tool (Preat order number 8397) portion separately, start with Step 1.



1. Replace the previous curved Male Removal Tool portion of the LOCATOR Core Tool with the new tip (8397), adding it to the Core Tool's existing middle (Male Seating Tool) and end (Abutment Driver) sections. Tighten all 3 pieces together.



2. Loosen the new (8397) Male Removal Tool a full 3 turns counter clockwise (you will see a visible gap).

3. To remove, simply insert the new tip into the cap/male assembly and push straight in to the bottom of the nylon male. Then tilt the tool so that the sharp edge of the tip will grab hold of the male and pull it out of the cap.

4. To disengage the tool, tilt the tool down and away from you and tighten the new Male Removal Tool clockwise back onto the Core Tool. This will activate the removal pin and dislodge the nylon male from the tip end of the Male Removal Tool.



5. Separate the Male Removal Tool section from the LOCATOR Core Tool and use the Male Seating Tool end of the remaining two sections to place a new nylon male into the empty titanium metal housing.

**Preat Corporation 1-800-232-7732**  
[www.preat.com](http://www.preat.com)



T-0112 Rev.00